



ACCESSORIES



ADVANCED MEASURING INDUSTRIAL INSTRUMENTS Co
A 9COM APPROVED COMPANY

PRESSURE GAUGE | THERMOMETER | DIAPHRAGM SEAL | ACCESSORIES

www.ami-sa.com



the pressure equipment safety authority



NS : 40 / 50 / 63 / 80 /
100 / 125 / 160 /
200 / 250mm

**Ranges
available up
to 60,000 psi**

WETTED PARTS -AVAILABLE SS 316L , HASTELLOY-C276 , INCONEL 625 , MONEL 400

- Bourdon Tube - AS PER NACE MR 0175
- Socket - AS PER NACE MR 0175
- Bourdon Tube - Seamless Tube
- Tig Welding - Approved by TUV
- Leak Testing - Helium Leak Tested
- Movement - Silicone Jelly Movement
- Dial - White Aluminum
- Window - Safety Glass
- Gasket - NBR
- Blow out Disc - Temperature Compensated
- IP Protection - IP 68

*PLEASE REFER PRESSURE GAUGE CATALOGUE FOR DETAILS

Table of contents

SR NO.	MODEL NO.	DESCRIPTION	PAGE NO.
1	AC-01	COOLING TOWER	1
2	AC-02	GAUGE COCK	3
3	AC-03	OVERLOAD PROTECTOR	5
4	AC-04	FLUSHING RING	7
5	AC-05	PULSATION DAMPNER ADJUSTABLE NEEDLE TYPE	9
6	AC-06	SIPHON	11
7	AC-07	SWIVEL ADAPTER	13
8	AC-08	MAX DRAG RED POINTER	14

SPECIAL FEATURES

Stainless Steel Construction
Suitable for Clean Air, Gases
& Non Crystallized Liquids

STANDARD VERSION

Operating Temperature: Type CT1 & CT2-Up to 220°C
Type CT3 Up to 150°C


Material of Connection: AISI 316 SS

APPLICATIONS


Cooling Towers are used mainly to protect Pressure Instruments, Gauges, Switches and Transmitters. Directly coming in contact with high temperature Process fluid or Vapours filled with condensation fluids. These are mounted between process and pressure instrument. They reduce process pulsation, Act as Heat Dispenser and generate cooling effect to save instrument from working at Dangerous Temperature.




CT 1- PERFORATED TYPE

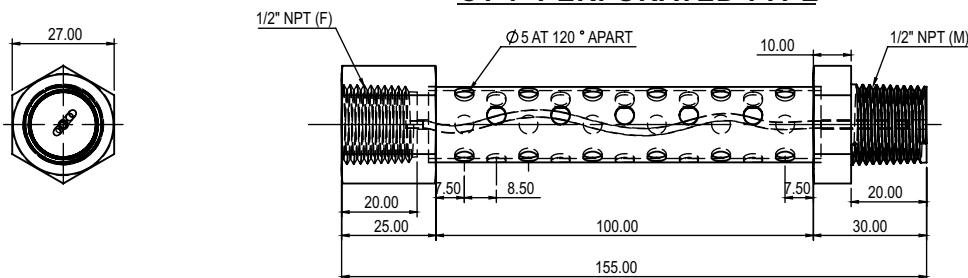


CT 2- FIN TYPE

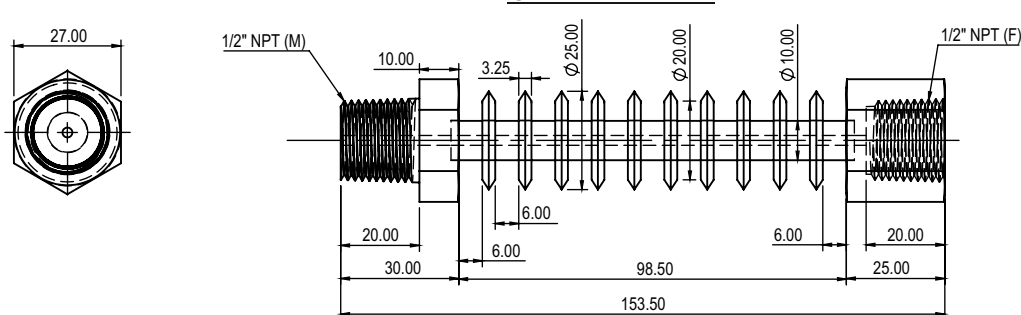

CT 3- CAPILARY TYPE

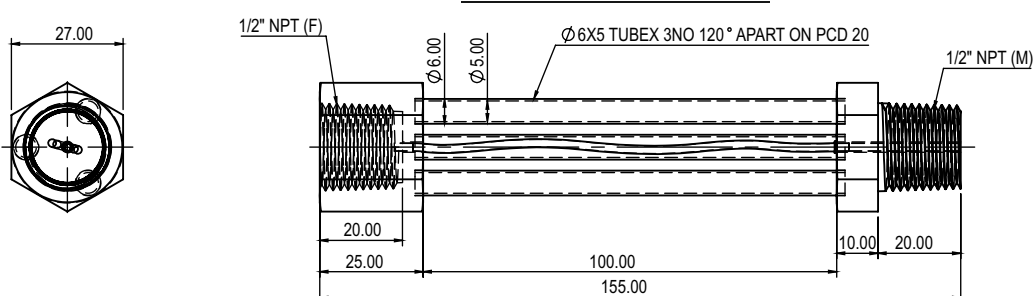

COOLING TOWER FIN TYPE HEAT LOSS CHART

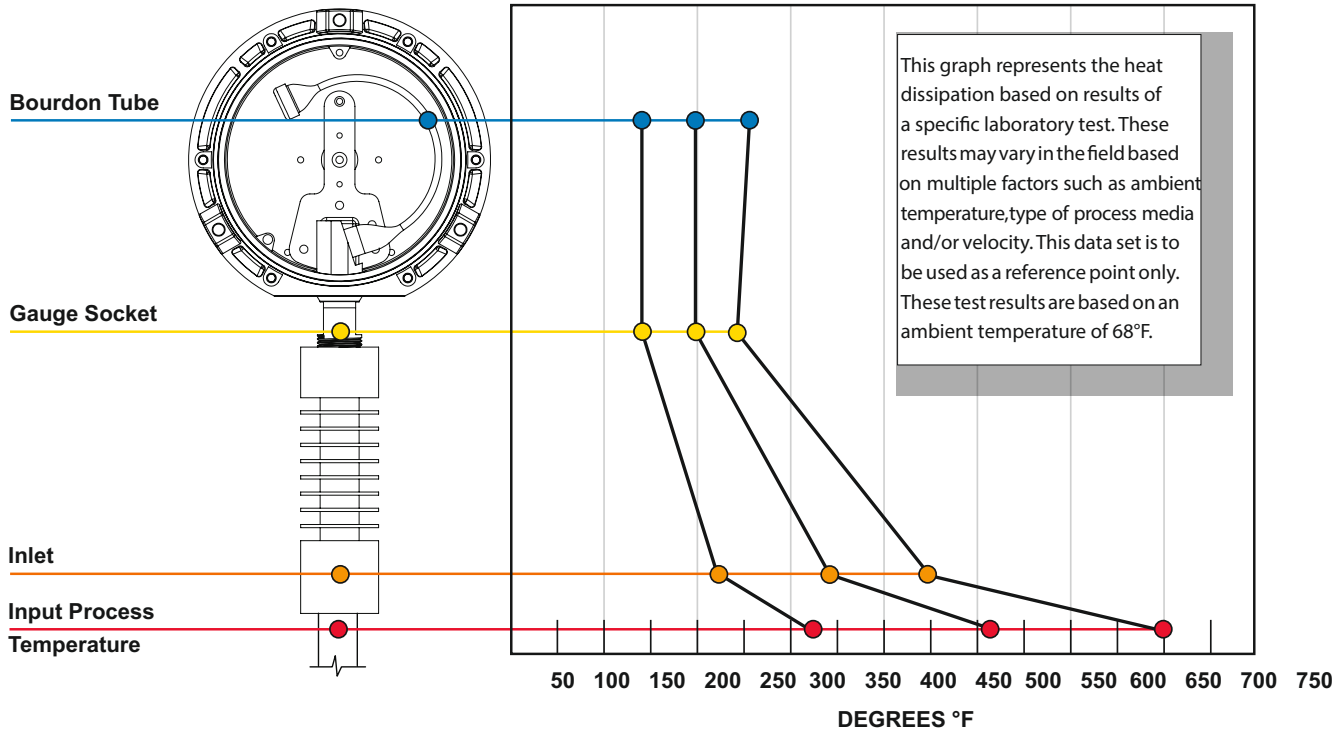

HOW TO ORDER

BASIC MODEL

Example

AC-01

TYPE

XXX

CT1 PERFORATED **CT2** FIN TYPE **CT3** CAPILLARY

BODY

XX

KM AISI 316L SS **KV** CARBON STEEL **KX** TITANIUM
KY HASTELLOY C **KW** MONEL **CT** ANSI 316 SS (Standard)

CONNECTION

2BM.2BF 1/4" BSP (M X F) **3BM.3BF** 3/8" BSP (M X F) **4BM.4BF** 1/2" BSP (M X F) XXX.XXX
2NM.2NF 1/4" NPT (M X F) **3NM.3NF** 3/8" NPT (M X F) **4NM.4NF** 1/2" BSP (M X F)

Ordering Example: **AC-01-XXX-XX-XXX.XXX**

SPECIAL FEATURES

PTFE adjustable packing installed below operating threads to prevent Media Contamination or Lubricant Washout of operating threads
spindle for longer durable operation
with air vent hole (Optional)


STANDARD VERSION

Body: AISI 316 SS
Handle: AISI 316 SS
Working Temperature: Up to 180°C
Gasket Seal: PTFE
Nominal Pressure: 100 kg/cm²



APPLICATIONS

Hydraulic Machines, Compressors, Process Plants,
Clean Air, Gases & Non Crystallized Liquids.

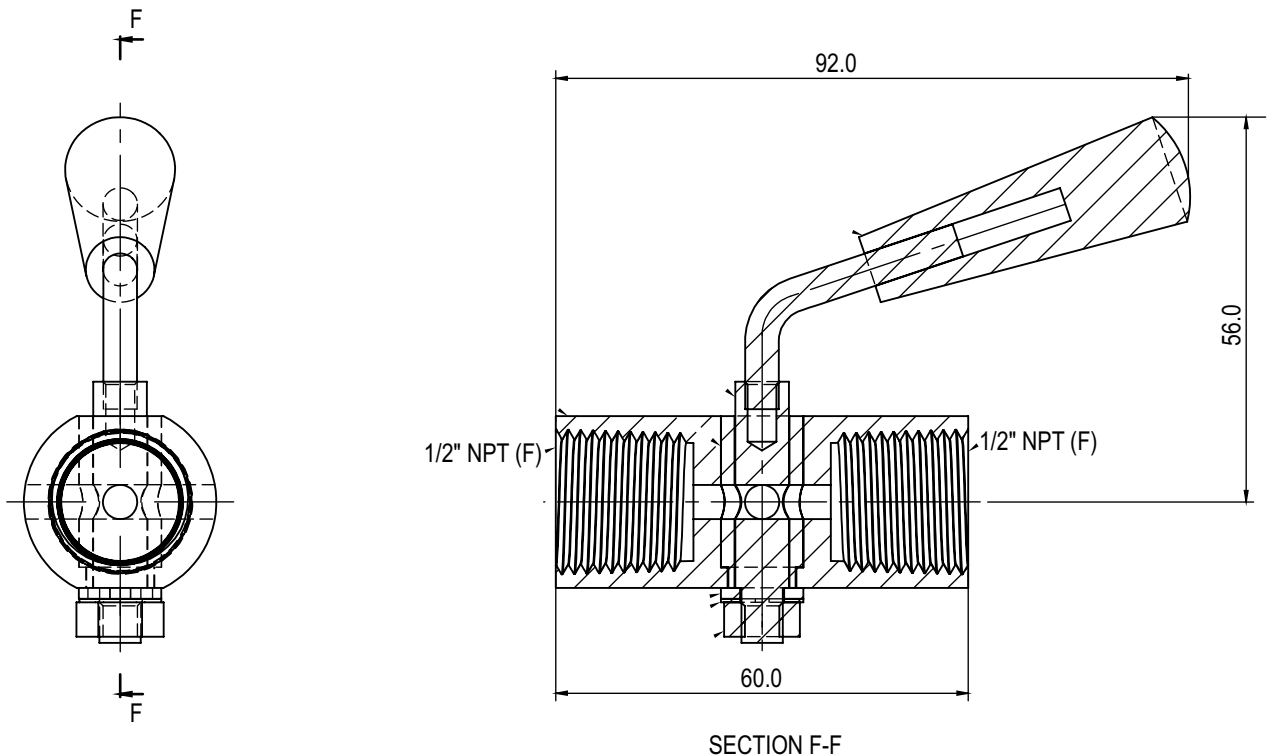

HOW TO ORDER

BASIC MODEL

Example

AC-02

TYPE

KS 2 WAY-ROUND BAR **KU** 3 WAY-ROUND BAR **KT** 3 WAY-SQUARE BAR

XX

BODY

KM AISI 316L SS **KV** CARBON STEEL **KX** TITANIUM
KY HASTELLOY C **KW** MONEL **CT** ANSI 316 SS (Standard)
CP BRASS

XX

SIZE & END CONNECTION [INLET X OUTLET]

NF 1/4" (F X F) (Standard) **NI** 3/8" (F X F) (Standard) **NL** 1/2" (F X F) (Standard)
NG 1/4" (M X F) **NJ** 3/8" (M X F) **NM** 1/2" (M X F)
NH 1/4" (M X M) **NK** 3/8" (M X M) **NN** 1/2" (M X M)

XX

In case of 3 Way Gauge Cock ,One Connection will be Male & Another Two will be Female.

Example:NM: 1/2" (M X F) Means 1/2" (M X F X F)

THREAD TYPE

GU BSP **GV** NPT

XX

OPTIONAL EXTRAS

GH Material Test Certificate **GI** Vent Hole

XX

Ordering Example: AC-02-XX-XX-XX-XX-XX

SPECIAL FEATURES

Nominal Pressure up to 400 bar
7 different selectable setting ranges
over pressure up to 600 bar
below types & Piston type models.

STANDARD VERSION

Overload Protector Type: E01 Bellow Type
E02 Piston Type

Adjustable Range: E01 600 mbar to 4 bar
E02 6 bar to 400 bar

"O"Ring: Viton

Maximum Working Pressure: 400 bar

Operating Temperature: -40°C to 120°C

Material of Construction: AISI 316 SS





APPLICATIONS

Designed to protect pressure instruments from over pressure exceeding the specified pressure range by sudden & excessive pressure fluctuation from surge or spike.

This device blocks the higher pressure exceeding the allowed value, Until it comes back to normal, When system pressure becomes normal.

Hence this device safeguards the Pressure Instruments, Gauges, Switches or Transmitters by blocking extra high pressure.

Widely used in Mechanical Engineering and Plant Construction, Power Stations, Mining, Environmental Technology, Chemical and Petrochemical, On Shore & Off Shore.

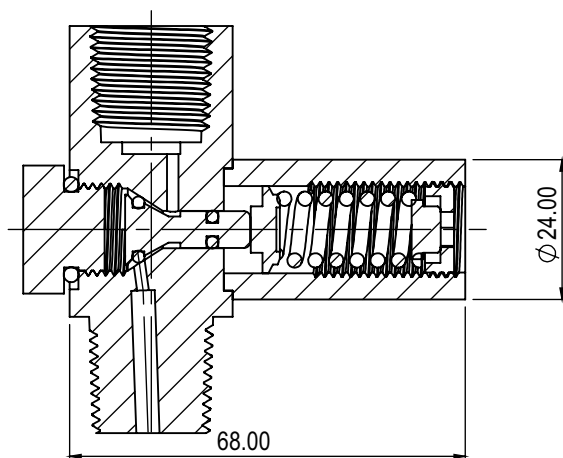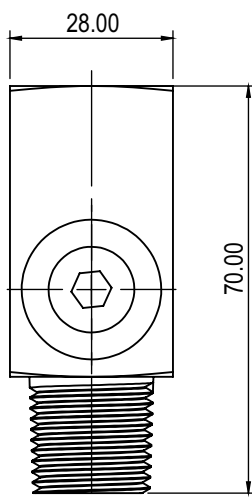

HOW TO ORDER

BASIC MODEL

Example

AC-03

ADJUSTABLE RANGE

CQ AISI 304 SS **CP** BRASS **CL** AISI 316 SS (Standard)

XXX
OR
XXX/XXX

RANGE TABLE

TYPE	RANGE
E01	600 mbar to 1.5 bar
E01	1 to 4 bar
E02	4 to 16 bar
E02	10 to 40 bar
E02	30 to 80 bar
E02	60 to 160 bar
E02	100 to 400 bar

Note : Specify required Range or Adjustable Range while ordering.
Otherwise the protector will be set to first value of adjustable range table.

BODY

KM AISI 316L SS **KV** CARBON STEEL **KX** TITANIUM
KY HASTELLOY C **KW** MONEL **CT** ANSI 316 SS (Standard)
CB INCONEL 625 **CC** SUPER DUPLEX

XX

PROCESS CONNECTION

XXX.XXX

2BM.2BF 1/4" BSP (M X F) **3NM.3NF** 3/8" NPT (M X F)
2NM.2NF 1/4" NPT (M X F) **4BM.4BF** 1/2" BSP(M X F)(Standard)
3BM.3BF 3/8" BSP (M X F) **4NM.4NF** 1/2" NPT (M X F)(Standard)

OPTIONAL EXTRAS

GH Material Test Certificate** **SG** Oxygen Service*
TF Tested to NACE Standard

XX

Ordering Example: AC-03-XXX OR XXX/XXX -XX-XXX.XXX-XX

SPECIAL FEATURES

With Double Flushing Ports.
Suitable with Flanged ,Pancake or Inline diaphragm Seals.
Available in all Exotic Materials Grades.


STANDARD VERSION

Flange Size: 2" to 5" as per ANSI B 16.5
Material: AISI 316 SS
Number of Ports : Two
Port Connection: 1/4" NPT (F) with male plug
sealing face: Raised Face



APPLICATIONS

The Flushing Ring is designed to be sandwiched between the process flange & the Diaphragm Seal. Material collected in front Diaphragm can be flushed out through the flushing ports.

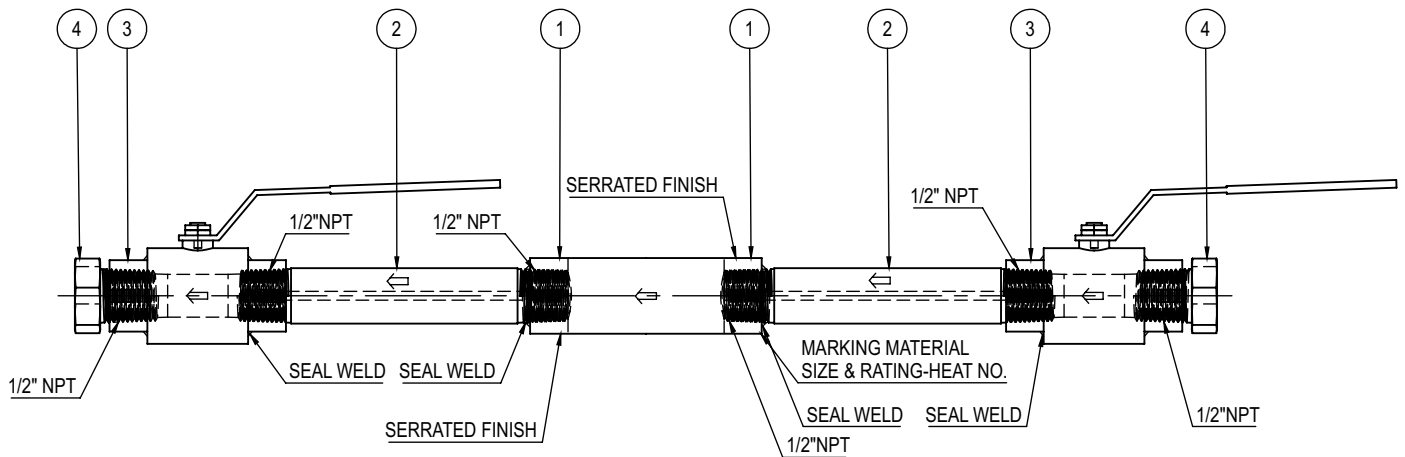

ITEM NO.	DESCRIPTION	QTY (NO.)
1	FLUSH RING	1
2	NIPPLE	2
3	BALL VALVE	2
4	BLIND PLUG	2

HOW TO ORDER

BASIC MODEL

FLUSHING RING MATERIAL

KM	AISI 316L SS	KV	CARBON STEEL	KX	TITANIUM
KY	HASTELLOY C	KW	MONEL	CT	ANSI 316 SS (Standard)
UW	INCONEL 625	UN	SUPER DUPLEX	TE	UNS S31254

FLUSHING PORTS (WITH TWO MALE PLUGS)

VF	1/4"NPT (F) Standard	VD	1/2"NPT(F)
-----------	----------------------	-----------	------------

SEALING FACE

A2	RAISED FACE	A3	FLAT FACE	A5	RING JOINT (RTJ,RJ)
-----------	-------------	-----------	-----------	-----------	---------------------

Note : Other Sealing face can be provided on request.Please specify in notes.

OPTIONAL EXTRAS

GH	Material Test Certificate**
-----------	-----------------------------

Ordering Example: AC-04-XX-XX-XX-XX

Example

AC-04

XX

XX

XX

XX

SPECIAL FEATURES



Designed to protect Pressure Instruments
from sudden Pressure changes & Fluctuation.

STANDARD VERSION

Working Pressure: Up to 400 kg/cm²
Working Temperature: -20°C to 120°C
Instrument Connection : 1/2"NPT(F)
Process Connection: 1/2" NPT (M)
Material: AISI 316 SS

APPLICATIONS

Hydraulic Machines, Compressors, Process Plants,
Clean Air, Gases & Non Crystallized Liquids.

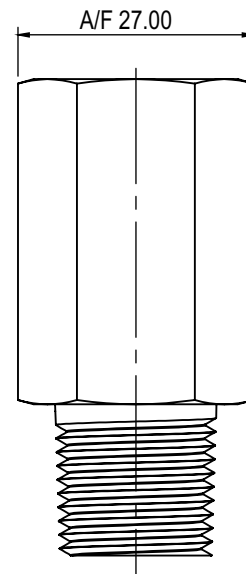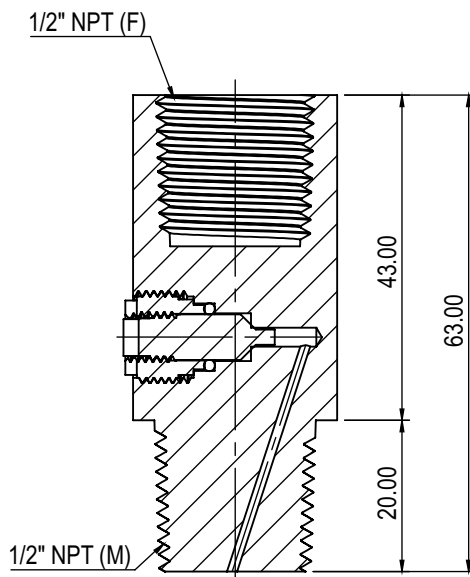

HOW TO ORDER

BASIC MODEL

Example

AC-05

BODY

KM	AISI 316L SS	KV	CARBON STEEL	KX	TITANIUM
KY	HASTELLOY C	KW	MONEL	CT	ANSI 316 SS (Standard)

XX

*In case of wetted parts of Brass ,Max,Pressure shall be 250kg/cm2

CONNECTION

2BM.2BF	1/4" BSP (M X F)	3BM.3BF	3/8" BSP (M X F)	4BM.4BF	1/2" BSP (M X F)(Standard)
2NM.2NF	1/4" NPT (M X F)	3NM.3NF	3/8" NPT(M X F)	4NM.4NF	1/2" NPT(M X F)(Standard)
2TM.2TF	1/4" BSPT (M X F)	3TM.3TF	3/8" BSPT (M X F)	4TM.4TF	1/2" BSPT (M X F)
				4MM.4MF	M20 X 1.5 (M X F)

XXX.XXX

OPTIONAL EXTRAS

SG	OXYGEN SERVICE	GH	MATERIAL TEST CERTIFICATES*	TF	TESTED TO NACE STANDARDS
-----------	----------------	-----------	-----------------------------	-----------	--------------------------

XX

Ordering Example: **AC-05-XX-XXX.XXX-XX**

SPECIAL FEATURES

Pigtail, Coil and "U" Type Shapes
 Maximum Temperature up to 400°C
 Nominal Pressure up to 160 bar
 Tig Welded & Hydro Tested
 Made with Seamless Pipe.



APPLICATIONS


Siphons are used mainly to protect Pressure Instruments, Gauges, Switches and Transmitters directly coming in contact with high temperature process fluids or vapours. These are mounted between process and Pressure Instrument, They reduce process pulsation and generate cooling effect to save the Instrument.


SPECIFICATIONS

BODY MATERIAL
AISI 316 Stainless Steel

PIPE SIZE
1/2" , Schedule 40

OPERATING PRESSURE
100 bar at 120°C

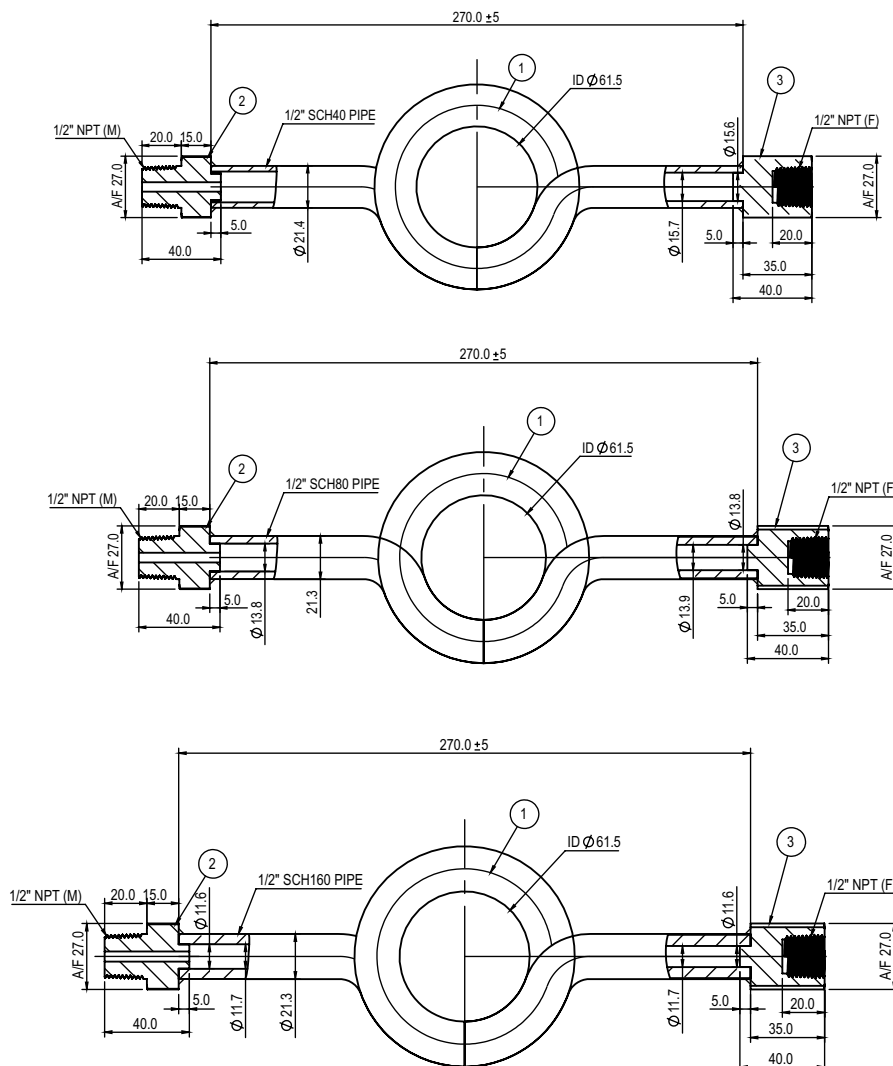

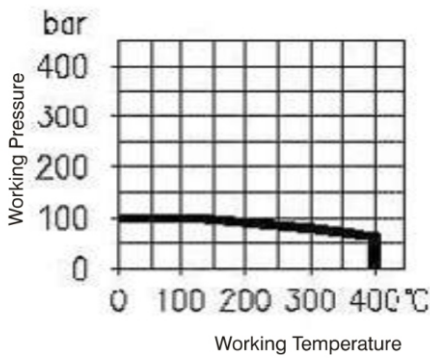

PIGTAIL TYPE

Form	Body Material	Size	Pressure Rating (Bar)	Temp. Rating
	Steel, Sch.40	1/4" NPT	34.47	204.44
	AISI 316 SS	1/4" NPT	34.47	204.44

COIL TYPE

Form	Body Material	Size	Pressure Rating (Bar)	Temp. Rating (°C)
	Steel, Sch.40	1/4" NPT	34.47	204.44
	Steel, Sch.80	1/4" NPT	34.47	204.44
	Steel, Sch.80	1/2" NPT	206.84	204.44
	Steel, Sch.160	1/2" NPT	249.59	371.11
	AISI 316 SS Steel, Sch 80	1/2" NPT	182.71	260
	AISI 316 SS Steel, Sch 160	1/2" NPT	386.1	260

HOW TO ORDER

BASIC MODEL (WITH PLAIN END)

TYPE

MR COIL TYPE **MS** PIGTAIL TYPE **MT** 'U' TYPE

BODY

CR CARBON STEEL (RED OXIDE PAINTED)* **CQ** AISI 304 SS **CL** AISI 316 SS(Standard)
CS MILD STEEL (CHROME PLATED)* **CM** AISI 316L SS

PIPE SIZE & SCHEDULE

Pipe Size	Schedule
1/4"	40 , 80 & 160
3/8"	40 , 80 & 160
1/2"	40 , 80 & 160

CONNECTION TYPE

MU SWIVEL FEMALE CONNECTION* **MV** ADAPTOR FOR MALE OR FEMALE THREADING
CZ MALE THREAD ON PIPE

CONNECTION

2BM.2BF 1/4" BSP (M X F)	2BM.2BM 1/4" BSP (M X M)	2BF.2BF 1/4" BSP (F X F)
2NM.2NF 1/4" NPT (M X F)*	2NM.2NM 1/4" NPT (M X M)	2NF.2NF 1/4" NPT (F X F)*
3BM.3BF 3/8" BSP (M X F)	3BM.3BM 3/8" BSP (M X M)	3BF.3BF 3/8" BSP (F X F)
3NM.3NF 3/8" NPT (M X F)*	3NM.3NM 3/8" NPT (M X M)	3NF.3NF 3/8" NPT (F X F)*
4BM.4BF 1/2" BSP (M X F)(Standard)	4BM.4BM 1/2" BSP (M X M)	4BF.4BF 1/2" BSP (F X F)*
4NM.4NF 1/2" NPT (M X F)(Standard)*	4NM.4NM 1/2" NPT (M X M)	4NF.4NF 1/2" NPT (F X F)*
4NM.PE 1/2" NPT (M)X PLAIN END		

OPTIONAL EXTRAS

PV WITH IBR APPROVAL **GH** MATERIAL TEST CERTIFICATES **CW** MARKING BY LASER
CX MARKING BY ENGRAVING


Ordering Example: AC-06-XX-XX- (1/4-40)-XX-XXX.XXX-XX

SPECIFICATIONS

Rating: 6000 psi / 400 bar
 Material: AISI 316 SS
 Instrument Connection: 1/2" NPT (F)
 Process Connection: 1/2" NPT (M)

APPLICATIONS

For the mounting of Pressure measuring instrument , Stopcocks , Shut-off Valves Syphons, Snubbers and other accessory components.

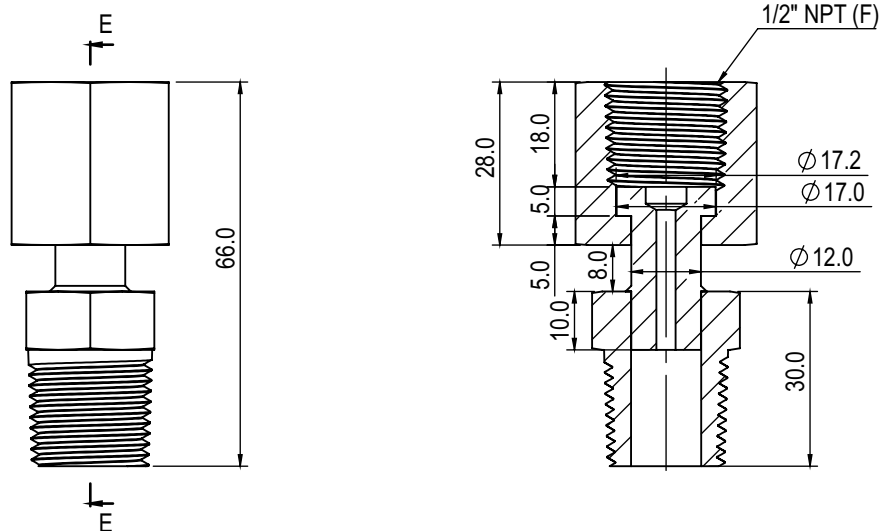

HOW TO ORDER

BASIC MODEL

BODY

CL AISI 316 SS	CM AISI 316L SS	CN MONEL 400	CA HASTELLOY C276
CB INCONEL 625	CC SUPER DUPLEX	CD DUPLEX	CF UNS S31254

CONNECTION

NF 1/4" (F X F)	NI 3/8" (F X F)	NL 1/2" (F X F)	NG 1/4" (M X F)
NJ 3/8" (M X F)	NM 1/2" (M X F)	NH 1/4" (M X M)	NK 1/2" (M X M)

THREAD

GU BSP	GP NPT
---------------	---------------

OPTIONAL EXTRAS

PV WITH IBR APPROVAL	GH MATERIAL TEST CERTIFICATES	CW MARKING BY LASER
CX MARKING BY ENGRAVING		

Ordering Example: **AC-07-XX-XX-XX-XX**

Example

AC-07

XX

XX

XX

XX

SPECIAL FEATURES

Curved Type Polycarbonate Lens
Maximum Drag Pointer With Key
0.39" (10mm) Pointer Arm
DIN Case & American Bayonet Case
Versions For Options

SPECIFICATIONS


Material: Polycarbonate (PC)
Type: Curved Type
Pointer: Aluminum Red Painted With Key
Pointer Arm: 0.39" (10mm) Customer Can Cut As Request




STANDARD VERSION NOMINAL SIZE

NOMINAL SIZE: 2.5" (63mm) & 4" (100mm)

DIN CASE TYPE

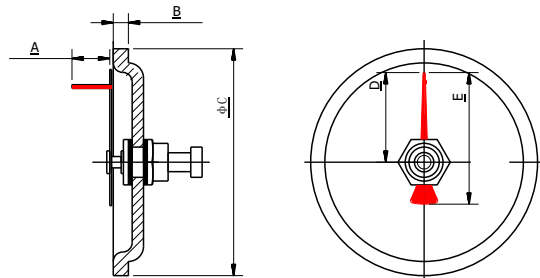

AMERICAN CASE TYPE

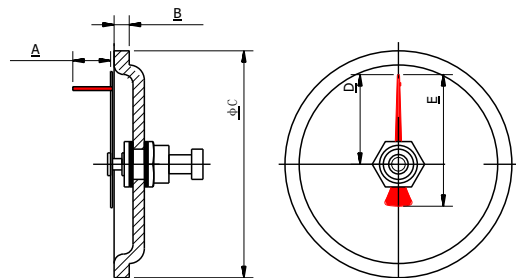

NS	A	B	ϕ C	D	E	Weight (lbs)
2.5"	0.39"	0.16"	2.36"	0.9"	1.36"	0.05
4"	0.39"	0.16"	3.74"	1.52"	2.24"	0.11

NS	A	B	ϕ C	D	E	Weight (lbs)
2.5"	0.39"	0.16"	2.52"	0.9"	1.36"	0.05
4"	0.39"	0.16"	4.13"	1.52"	2.24"	0.11



ABOUT US:

Elite instruments company having 20,500 square meter manufacturing area with 350 employees.

Elite instruments have daily production capacity of 20,000 instruments Per day.

Elite instruments total invested over 12million into our equipment and buildings.

Elite Instruments is an ISO 9000:2015 certified manufacturing company for Measuring instruments and its accessories.

We manufacture

- Pressure gauges,
- Ultra-high-pressure gauges,
- Temperature gauges
- Diaphragm seals
- Accessories
- Thermowells
- Valves and Manifolds.
- Pressure, temperature and level transmitters

Headquartered at China, Elite Instruments also have manufacturing locations at

- China
- Saudi Arabia
- Mexico
- India to better serve our customers.

We also have Distributors at

- TURKEY
- NETHERLANDS
- United States of America,
- CANADA
- MEXICO
- BRAZIL.

Elite instruments Established in 2010, we deliver over 8 million quality products per year 75 countries every year.

Currently Worldwide, estimated 6 million ELITE measuring instruments are in use. Elite serves a wide variety of industries worldwide, including:

- Oil and Gas
- Chemical and Petrochemical
- Food and Pharmaceutical
- Water and Wastewater
- Engineering and Process

Elite Instruments' customer service is fast and flexible. We always put our CUSTOMER FIRST.

Let us prove that we are the best choice for your manufacturer of measuring instruments.

Elite also specializes in developing custom-built OEM products as per customer exact requirements.

Our proficient team of engineers will work to bring your custom design products to life, or work with you to create new products designed to meet your exact needs.

Our customers have testified that the Quality, workmanship, appearance and packaging of Elite products are second to none.

Please visit our website www.elite-instruments.com or send your enquiry to sales@elite-instruments.com

PRESSURE GAUGES





Manufacturing Units

HANSHAN ELITE INSTRUMENTS CO.,LTD

No.27 Xudong Road, Small & Mirco Business Park ,Hanshan Economic
Development Zone Ma'anshan City,An Hui Province, China-238100
Tel.+86 555-4333999 Fax:+86 555-4333999 ,Mobile: +86 13586509674
Email :sales@elite-instruments.com/ snreddy@elite-instruments.com

ELITE INSTRUMENTS

Special Plot No.3 ,Phase-2 APIC Industrial Park,Peddapuram 533437-East Godavari
District,Andhra Pradesh,INDIA Tel.+91 08852-294678 Mobile: +91 90632 54469
Email :sales@elite-instruments.com /snreddy@elite-instruments.com

ELITE INSTRUMENTS PTE.LTD

3014A, MIT-KEPANG UBI, #03-06,
UBI ROAD 1, SINGAPORE, Zip Code: 408703 Tel: +65 9372 9989
Email :sales@elite-instruments.com /snreddy@elite-instruments.com

ADVANCED MEASURING INSTRUMENTS CO.LTD

Building No.2937, Road No.:114 PO Box 35938Al Jubail Industrial City 31961,
KingdomofSaudiArabiaTel.+966 133400405.
Email : sales@elite-instruments.com /snreddy@elite-instruments.com